



+ CARE & MAINTENANCE

Cleaning

1. Do not use steel wool, abrasive cleaning agents or corrosive liquids (such as gasoline or acetone) to clean the product.
2. Wipe with a soft and dry cloth to clean the product.
3. Do not use a damp cloth or detergent.

Storage

1. Switch off and unplug the plug from the power outlet.
2. Store the product in a cool dry place away from sunlight.
3. Do not put a heavy weight load on the product.
4. If the cover is damaged or there is any mechanical failure, please contact the service center .



+ PRODUCT SPECIFICATIONS

Product Name	Hand Massager Plus
Model	CD-001
Input	DC 12V 1500mA
Power	18W
Net weight	1580g
Measure size	270mm×195mm×130m
Auto timer	20mins

Calor  Derm

HAND
MASSAGER
PLUS



Hand Massager Plus
(User manual)



+ SAFETY PRECAUTIONS



+ CONTENTS

Safety Precautions1-2

Product Description3

How To Operate4

Troubleshooting5

Care & Maintenance6

Product Specifications6

 
HAND
MASSAGER
PLUS

1. People with the following conditions should consult their physician before using the product ;
 - Who uses a medical electronic device, which is embedded in the body, such as a pacemaker.
 - Who suffers from heart disease/stroke/high blood pressure.
 - Who suffers from hand injury or disease.
 - Who is suffering from bone fragility or problem, especially on hand, or shortly after surgery.
 - Who is pregnant, or shortly after delivery or in a period of monthly illness.
 - Who suffers from malignant tumors.
 - Who is suffering from osteoporosis.
 - Who has problems with blood circulation or thrombosis.
 - Who is suffering from skin infection or disease or bruise.
 - Who is undergoing medical treatment or feels some physical abnormality previously or is being treated now.
 - Who has some abnormality or deformity of limbs or hand.
 - Who has hand problems or injuries due to illness or accident.
 - Who is suffering from sensory disturbance or advanced peripheral circulatory disturbance or diabetes or anemia.
2. Do not let water enter the product or splash on the surface of the product.
3. Water contact with electricity is dangerous. Do not leave the product in a humid environment (such as in the bathroom or shower room or next to swimming pool).
4. Before connecting the product to the power supply, check if the product voltage and supply voltage are the same.
5. If the plug, power cord or product itself is damaged, do not use the product.
6. In order to prevent the risk of electric shock, do not open the product outer casing.
7. Product is not intended for use by the disabled, sensory or mental impaired persons (including children), unless there issupervision or guidance by the people responsible for their safety when they use the product.

... + SAFETY PRECAUTIONS

8. If the product or the power cord is damaged, in order to avoid danger, do not try to repair the product. This must be handled by Manufacturer's specialist / technician, or the product guarantee will be void.
9. Children should not use this product. They should be under supervision to ensure that they will not treat this product as a toy.
10. If an unusual sound or noise is being heard from the product, turn off the product and immediately disconnect the power connection.
11. Do not use the product if cover is damaged or if there is a mechanical or electronic failure.
12. Only use or place the product in accordance with the instructions in this user manual.
13. Do not use this product in high temperature environment or beside hot objects such as heaters, stoves.
14. Do not apply medical or cosmetic cream on the product or on your body before using or during the use of this product.
15. When massaging the hand, take note of the movement of rollers and refrain from using excessive intensity.
16. Do not destroy, bend, stretch, twist or tie the power cord. Damaged power cord can cause fire or electric shock.
17. Recommended usage time for an individual is 20 minutes at a time.
18. Please remove all accessories on hand and wrist before use.
19. Do not use the product while sleeping, when drunk or during a fever.
20. If there is any abnormality, please stop using the product and consult a doctor immediately.
21. Please do not use the hand massager while driving.
22. This is a relaxation product, not a medical product.


... + PRODUCT DESCRIPTION

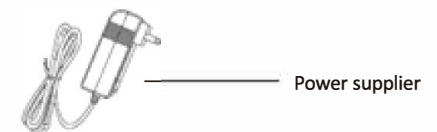

② Power supplier (DC12V 1500mA)

+ HOW TO OPERATE

 + TROUBLESHOOTING

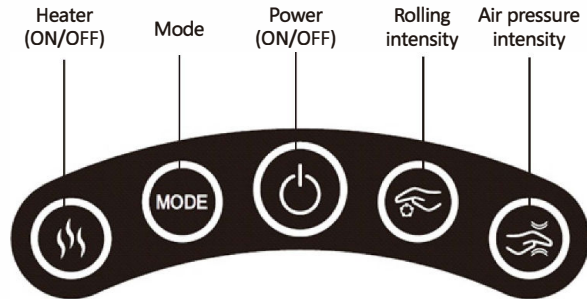

Connect Power plug : Connect to the outlet using the unit's own power supply, and then plug the power supply's DC plug into its own DC power hole.

Preparing for massage : Place the hand that needs to be massaged at a comfortable angle inside the hand massager.

TO start : Short press power button, the LED light will become brighter and massage program enter the automatic integration mode.

TO change the massage mode : Short press the button , the product change the working mode ,

LED blue color : Integrated mode, the product will automatically perform a full-hand massage. At this time, it is recommended to put your hand in the deepest part of the machine.

LED Purple color: Finger mode, the product will focus on the finger massage. At this time, it is recommended to put your hand in the deepest part of the machine.

LED Red color: Palm mode, the product will focus on the palm massage.

In this mode, the palm part should be removed from the machine and the palm placed in the air pressure massage area.

To Stop: Short press the power button and the massage stop.

To turn on Heat: Warm heater started automatically after starting, if need stop the heater, press the heater button, the red LED light disappears.

To change the rolling massage intensity : In the working mode, short press to change the roller massage intensity.

Level 1: Blue color, Level 2: purple color, level, Level 3: Red color

To change the air pressure intensity : In the working mode, short press to change the intensity of the air pressure massage,

Level 1: Blue color, Level 2: purple color, level, Level 3: Red color

Automatic timer: the massage is set for 20 minutes when turned on. Massage stops when time elapsed.

This page summarizes the common problems you may encounter while using the product. If you are unable to resolve the problems with the suggestions below, please contact the service center.

Products can not working	<ol style="list-style-type: none"> 1.Power plug wrong connect 2.The product may have been continuously used for 40minutes or more that the overheat protection have been activated. 3.Other unknown fault. 	<ol style="list-style-type: none"> 1.Make sure power plug right connect and the power switch LED light turns white. 2.Unplug the product and let it cool down for 60 minutes before using it again. 3.Please contact the service center.
Sudden stop during massager	<ol style="list-style-type: none"> 1.Power plug fault 2.Other unknown fault 	<ol style="list-style-type: none"> 1.Re-connect power plug. 2.please contact the service center
Noise can be heard from the product	Noise is made by the mechanical parts of the product	This is normal and does not mean that the product is faulty.
The finger fell pin during massager	<ol style="list-style-type: none"> 1.Wrong placement of the finger 2.Strong air pressure 	<ol style="list-style-type: none"> 1.Turn off hand massager and adjust placement of the finger. 2.Adjust intensity of the air pressure.